




BRINKS® SECURITY LIGHTING SYSTEMS

A trusted name in security since 1859SM

Congratulations on your purchase of a Brink's outdoor Metal Halide Lamp Fixture.

WHAT'S INCLUDED:

- A - Main Fixture Housing
- B - Wiring Cover plate
- C - Reflector/Lens Assembly
- D - Photocell (part no. 7265)
- E - Metal Halide Lamp Bulb
- F - Fixture Mounting Lag Screws (3)
- G - Wiring Cover plate Screws (with washers and nuts) (2)
- H - Lens Assembly Screws (3) – pre-installed in unit
- I - Green Ground Screw (1) – pre-installed in unit
- J - Wire Connectors
- K - Protective Lens Cover

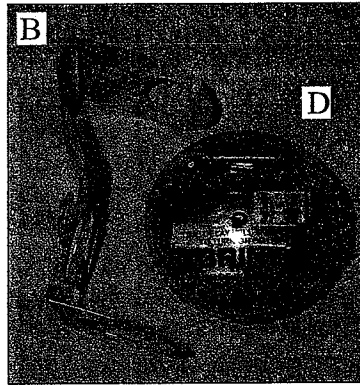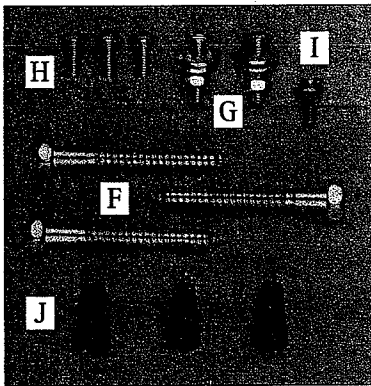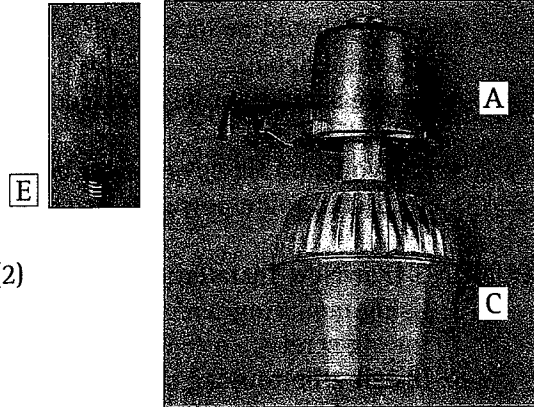

TOOLS YOU WILL NEED:

- Screwdriver
- Power Drill with a 3/16" Drill Bit
- Adjustable Wrench


IMPORTANT SAFETY INFORMATION

- BE SURE POWER IS TURNED OFF AT THE MAIN POWER PANEL OR FUSE BOX BEFORE INSTALLING OR REPLACING THE FIXTURE AND/OR WHEN REPLACING THE BULB.
- Before installing this fixture, be sure to check with local ordinances.
- This fixture is for outdoor use only and should not be used in areas with limited ventilation or high ambient temperatures.
- This fixture should be installed by a qualified electrician.
- The electrical system and the method of connecting the fixture to the system must be in accordance with local, state, and national electrical codes.
- This fixture is to be connected to a 120 Volts, 60 Hz power source. Connecting to a different power source may create a hazard and will void the warranty.
- Do not use near or around flammable/combustible material or liquids.
- The bulb and fixture can get extremely hot during use. Turn off the power and allow the fixture to cool down for at least 20 minutes before working on the unit.
- When replacing the lamp bulb, use only a 100W Metal Halide lamp bulb of the same size. Never use a bulb with a higher wattage than the stated maximum wattage allowed on the fixture. Using a higher wattage bulb may decrease the life of the bulb, cause a fire hazard, and/or cause damage to the unit.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

BULB INSTALLATION AND RE-LAMPING (Changing the lamp bulb)

Caution: Prior to installing check that the bulb is of the proper type and wattage. Observe bulb manufacturer's recommendations on lamp operation, ballast type, and burning positions.

1. Be sure power is OFF.
2. Remove protective lens cover (Fig1).
3. Remove old bulb by unscrewing counterclockwise.
4. Place bulb into bulb socket and screw bulb securely into bulb socket until it is firmly seated.
5. Replace protective lens cover (Fig2).
6. Turn power ON.

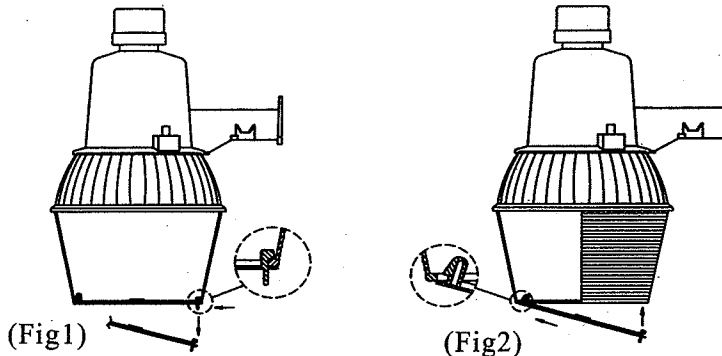

CAUTION: Protective Lens Cover must be properly installed before operating the fixture

CLEANING

Caution: Be sure fixture temperature is cool enough to touch. Be sure power is OFF.

Clean reflector and front housing with mild soap or household type detergent. Do not use acid, ammonia, or any other caustic solvent based cleaners.

TROUBLE SHOOTING CHECKLIST

If this fixture fails to operate properly, check to make sure that...

1. The correct bulb is properly installed.
2. The bulb is not faulty.
3. The main power or wall switch is ON.
4. The photocell is seated properly.
5. The photocell is not damaged or faulty.
6. There is no light being reflected back into the photocell causing the fixture to turn off.
7. The photocell is not blocked or covered.
8. The line voltage at the fixture is correct.
9. The fixture is wired correctly or that none of the wiring is loose.
10. The fixture is grounded properly.

QUESTIONS

For further assistance or more information, please call 1-800-562-5625 , 8 am - 5 pm (Pacific Time), Monday - Friday.

LIMITED LIFETIME WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

Limitations:

- This warranty only covers Brink's assembled lighting products and is not extended to other components or equipment that is used in conjunction with the product.
- This warranty is extended to the original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void this warranty in its entirety.
- THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR THAT THE PRODUCTS ARE FIT FOR ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.
- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

Not covered

- Light Bulb
- Photocell (5 Year Limited Warranty)
- Failure of the product as result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damage caused by separately purchased replacement bulbs.
- Corrosion and discoloration of brass components.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.

For information on a BRINK'S Home Security system installation, please call 1-800-847-0689

BRINK'S TRADEMARK & COPYRIGHT WORK FOR SECURITY LIGHTING SYSTEMS ARE USED WITH PERMISSION

BRINK'S®
Hampton Products International Corp.
50 Icon
Foothill Ranch, CA 92610-3000
1.800.562.5625
www.hamptonproducts.com

Made in China
©2007 HAMPTON PRODUCTS INTERNATIONAL CORP.
999-00108 REVA 09/07

IM-070069

INSTALLATION INSTRUCTIONS

IMPORTANT


Carefully read through the entire instructions before installing. Make certain power is OFF at the main power panel or fuse box before installing or maintaining fixture.

LOCATION

- Select a location on a structurally sound, flat wall or pole 10-25 feet above the ground.
- Fixture should be located on wall or pole at least 18" below any overhang or other structural detail.
- Fixture should not be recessed and must be positioned with bulb in vertical position with bulb socket base up.
- 120 Volts, 60 Hz power must be available at the desired location. If not, have a qualified electrician route power to that location.

MOUNTING (For New Installations)


1. Using mounting template as a guide, mark the 3 mounting holes locations. Drill 3/16" pilot holes for lag screws.
2. Install 2 bottom lag screws first. Screw in the lag screws so that there is about 3/8" of space under the head.
3. Place the end of the housing arm on the 2 bottom lag screws. Install the top lag screw then tighten the other 2 screws.

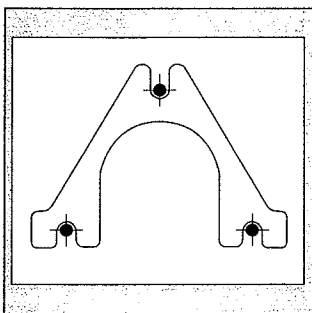

1.






2.

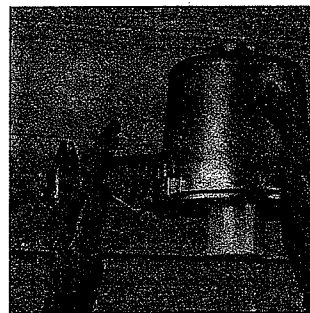

3.

WIRING

1. Thread wires from the conduit or junction box through one of the "knock out" holes in the wiring cover plate
2. Secure the outdoor cable or flexible conduit to cover plate with a fitting in accordance with local, state, and/or national electrical codes.
3. Thread wires from fixture through pre-existing hole in the wiring cover plate.
4. Wire fixture by connecting wires from the conduit or junction box with same colored wire from the fixture using supplied wire connectors.
 - a. Connect black fixture wire to black supply wire.
 - b. Connect white fixture wire to white supply wire.
 - c. Connect green fixture wire to green (or bare) supply grounding wire.
5. Install the wiring cover plate onto housing arm and secure with 2 screws, washers, and nuts provided. Make sure that all connections are encapsulated and that no wires are pinched by the cover plate.

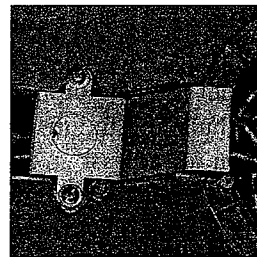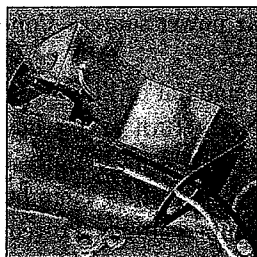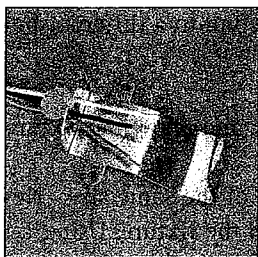

Conduit and Junction Box not shown

REFLECTOR/LENS INSTALLATION

1. Align large holes in the base of reflector/lens with screws heads.
2. Push reflector/lens until seated into the main fixture housing.
3. Rotate reflector/lens counterclockwise to engage keyed holes with the screws.
4. Reaching into the reflector/lens, tighten screws. Be careful not to over tighten.

PHOTOCELL INSTALLATION

1. Align photocell prongs with the photocell socket (it will only plug in one way).
Plug in and twist clockwise until it stops.
2. Photocell should be firmly seated.

NOTE:

- The "North" directional arrow that may be printed on the top of the photocell is not applicable when being installed onto this Brink's Metal Halide Light. This directional arrow is provided only as a reference for use on certain other compatible light fixture models.
- When power is initially turned on, the light may come on even in daylight. If this occurs, the light will turn off after two to three minutes and will automatically reactivate at dusk. If an artificial light source (e.g. automobile headlights) should accidentally activate the photocell and turn off the unit, the unit may take approximately 5 minutes to cool down before turning back on.

